

AirPcap Installation Guide

May 2013

riverbed®

© 2013 Riverbed Technology. All rights reserved.

Accelerate®, AirPcap®, BlockStream™, Cascade®, Cloud Steelhead®, Granite™, Interceptor®, RiOS®, Riverbed®, Shark®, SkipWare®, Steelhead®, TrafficScript®, TurboCap®, Virtual Steelhead®, Whitewater®, WinPcap®, Wireshark®, and Stingray™ are trademarks or registered trademarks of Riverbed Technology, Inc. in the United States and other countries. Riverbed and any Riverbed product or service name or logo used herein are trademarks of Riverbed Technology. All other trademarks used herein belong to their respective owners. The trademarks and logos displayed herein cannot be used without the prior written consent of Riverbed Technology or their respective owners.



RiverbedTechnology
199 Fremont Street
San Francisco, CA 94105

Tel: +1 415 247 8800
Fax: +1 415 247 8801
www.riverbed.com

712-00080-02

Contents

Introduction	1
Requirements	1
What is in the Box	1
What is on the CD	2
Driver Installation	2
Wireshark Network Analyzer Installation	5
Additional Tools Installation	6
Developer's Resources Installation.....	6

Introduction

Welcome to the Riverbed AirPcap 802.11 wireless capture solution. This Installation Guide applies to all of the adapters in the AirPcap Product Family including the Classic, Tx, and Nx.

Requirements

The minimum requirements to install and run the AirPcap Software are:

- Pentium 3 processor
- 256 Mbyte RAM
- USB 2.0 interface
- One of the following operating systems: Microsoft® Windows 2000, Windows XP (32/64), Windows 2003 Server (32/64), Windows Vista (32/64), Windows 7 (32/64).

What is in the Box

- One adapter from the AirPcap Product Family
- This Installation Guide
- The AirPcap Software Distribution CD
- Two Pigtails: 45 cm MC to SMA cables (AirPcap Nx only)
- Two 2.4GHz band 5dBi antennas (AirPcap Nx only)

What is on the CD

The AirPcap Software Distribution CD contains:

- The AirPcap driver, needed to use the adapter
- This Installation Guide
- The AirPcap User's Guide
- A folder with additional programs, including Wireshark, winpcap, and more
- Resources for developers interested in directly accessing the AirPcap adapter from their applications

Driver Installation


Important: Do NOT insert your adapter before installing the software. Please follow the steps below. This guide will inform you when it is appropriate to insert the adapter.

To install the software, follow these steps:

1. Power on your PC.
2. If you have a previous version of AirPcap software already installed on your system, uninstall it by clicking on:

Start » Control Panel » Add or Remove Programs » AirPcap Software

3. Insert the AirPcap Software Distribution CD into your CD drive.
4. The CD setup page should appear automatically. If it does not, please select your CD-Rom Drive manually to open the setup page.

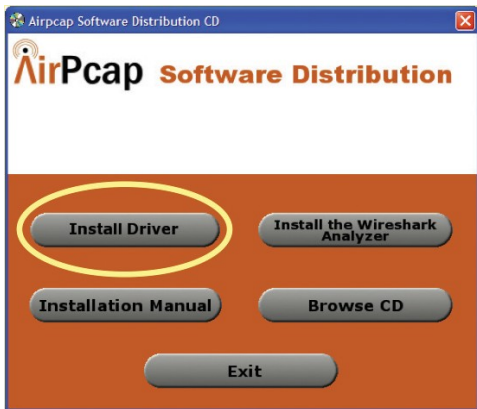

5. Click on *"Install Driver"* to initiate the installation.
6. Follow the installation instructions. The installer tries to detect if WinPcap is already installed in the machine, and if the installed WinPcap version supports AirPcap wireless capture. If not, you will need to upgrade WinPcap during the installation. You can access the latest WinPcap version from www.winpcap.org.
7. Upon completing the software installation, reboot the system if requested.

Important: Now plug your adapter into an appropriate USB port on your machine. Note that AirPcap Classic and Tx adapters will work in USB 2.0 and 3.0 ports; AirPcap NX adapters will work only in USB 2.0 ports.

Depending on the operating system version, when you plug the adapter in for the first time, Windows may show the “Found New Hardware Wizard”:



Any time this happens, answer these questions (if they appear) in the following way:

Can Windows connect to Windows Update to search for software?

» Select **“No, not this time”**

What do you want the wizard to do?

» Select **“Install the software automatically”**

Wireshark Network Analyzer Installation


Wireshark is the world's most widely deployed network analyzer. It is used by network professionals for troubleshooting, analysis, software and protocol

development, and education. Your AirPcap Wireless adapter has been integrated into Wireshark. Once you have installed Wireshark, you can immediately start capturing and analyzing 802.11 traffic.



To install Wireshark, follow these steps:

1. If you have a previous version of Wireshark already installed in your system, uninstall it by clicking on:
Start » Control Panel » Add or Remove Programs » Wireshark
2. Insert the AirPcap Software Distribution CD into your CD drive.
3. The CD setup page should appear automatically. If it does not, please select your CD-Rom Drive manually to open the setup page.

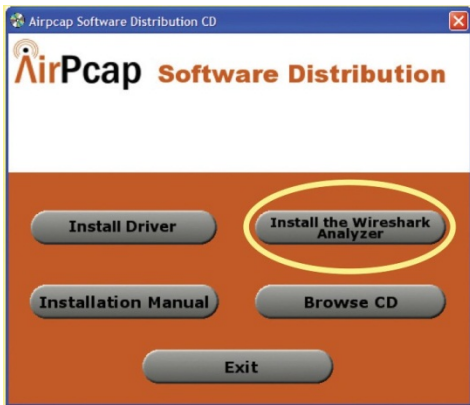

4. Click on *“Install the Wireshark Analyzer”* to initiate the installation.
5. Follow the installation instructions.

Additional Tools Installation

Additional AirPcap-compatible programs can be found in the installation CD by clicking on the *“browse CD”* button from the CD setup page and then opening the programs folder.

Developer’s Resources Installation

Riverbed provides a developer’s pack with everything you need for using an AirPcap adapter with your application for capturing 802.11 packets:

- Include and lib files
- Online API documentation
- A ready-to-compile set of example programs that shows how to configure the adapter and capture packets

The AirPcap Developer’s pack can be found in the *“developers”* folder of the AirPcap Software Distribution CD. To use it, just copy the folder to your hard disk and click on *“StartHere.html”*.

The developer’s folder also contains a copy of the WinPcap developer’s pack, in the *“WinPcap_Devpack”* subfolder. The AirPcap adapters are 100% compatible with WinPcap, making it straightforward to add 802.11 support to your existing WinPcap-based application.

If you are interested in adding support for the AirPcap adapters in your program, you can contact sales_airpcap@riverbed.com.

riverbed

Riverbed Technology
199 Fremont Street
San Francisco, CA 94105

Tel: +1 415 247 8800
Fax: +1 415 247 8801
<http://www.riverbed.com>